DTC P0137: Secondary Heated Oxygen Sensor (Secondary HO2S) (Sensor 2) Circuit Low Voltage

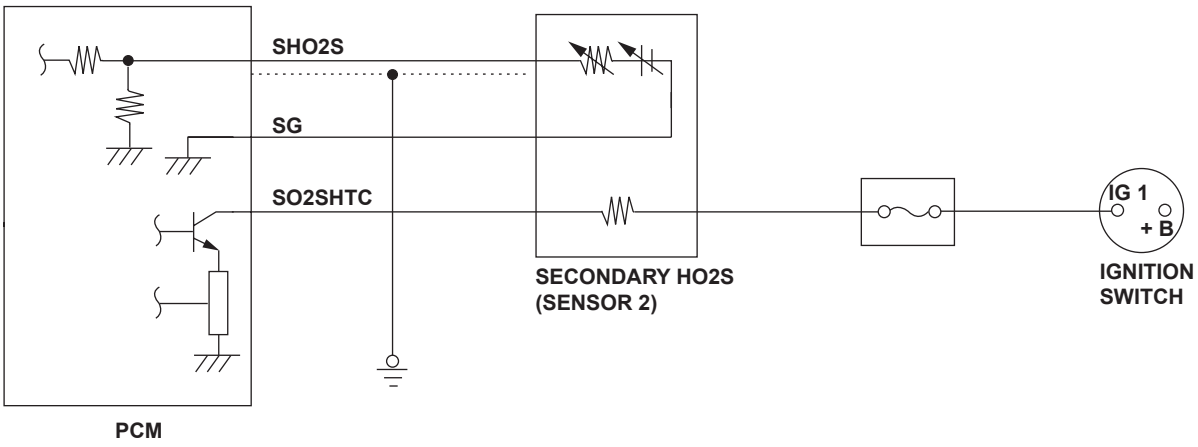

P0137-9802

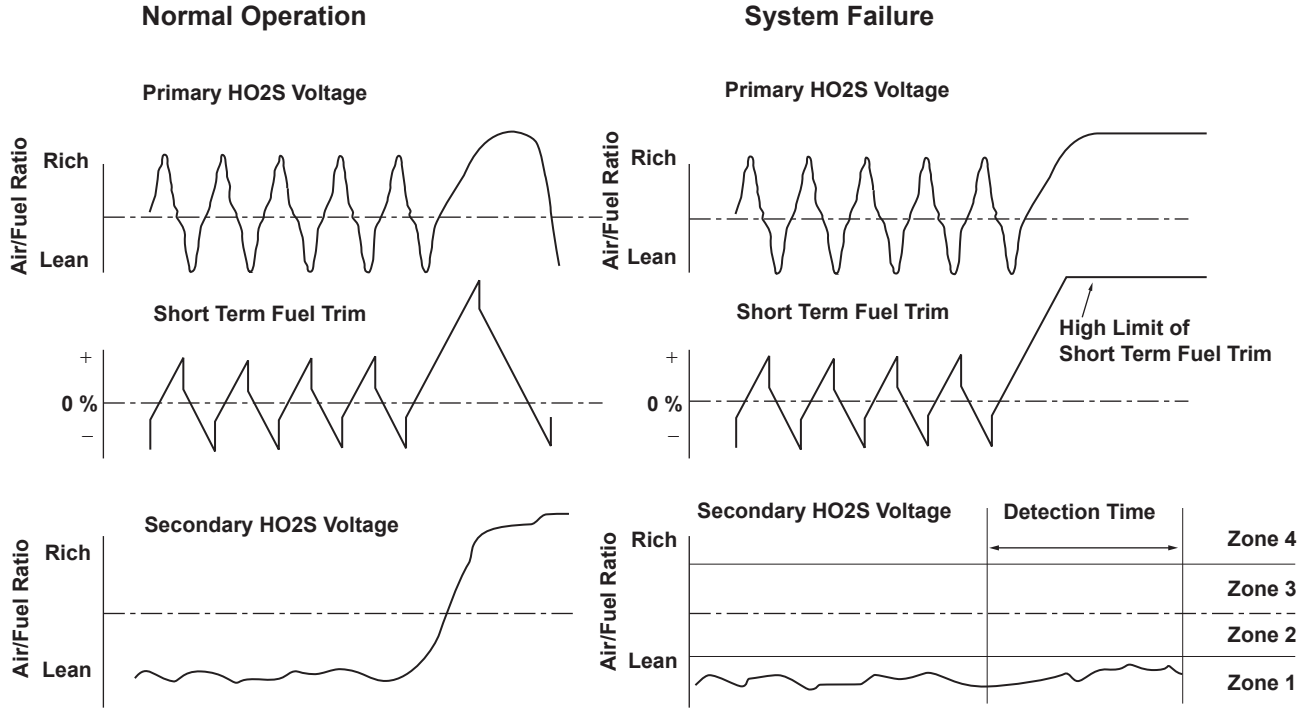

P0137-9671

General Description

The secondary heated oxygen sensor (HO2S) (Sensor 2) is installed downstream of the three way catalytic converter (TWC). The secondary HO2S detects the oxygen content in the exhaust gas downstream of the TWC during stoichiometric air/fuel ratio feedback control by the powertrain control module (PCM) from the primary heated oxygen sensor (HO2S) (Sensor 1) output voltage, and its output voltage is used to control the air/fuel ratio so that the TWC efficiency is optimized. The secondary HO2S output voltage range is divided into four zones. If the secondary HO2S output voltage remains in the same zone for a set time period during air/fuel ratio feedback control, the PCM controls the amount of injected fuel by changing the short term fuel trim.
If the secondary HO2S output voltage remains in Zone 1 after the PCM commands an increase in the short term fuel trim, a malfunction is detected and a DTC is stored.

Monitor Execution, Sequence, Duration, DTC Type

Execution	Once per driving cycle
Sequence	None
Duration	72 seconds or more
DTC Type	Two drive cycles, MIL ON

Enable Conditions

Condition	Minimum	Maximum
Elapsed time after starting the engine	200 seconds	—
Engine coolant temperature	140ºF (60ºC)	212ºF (100ºC)
Intake air temperature	32ºF (0ºC)	—
Engine speed	1,200 rpm	2,500 rpm
MAP value	27 kPa (199 mmHg, 7.9 in.Hg)	—
Vehicle speed	19 mph (30 km/h)	62 mph (100 km/h)
Fuel trim	0.73	1.47
Fuel feedback	Closed loop	
Monitoring priority	Primary HO2S, EVAP, Catalyst System	
No active DTCs	PCM, Primary HO2S, Primary HO2S Heater, Secondary HO2S Heater, MAP, CKP, ECT, TP, CYP, IAT, EGR, BARO, VTEC System, Fuel System, Misfire	

Malfunction Threshold

Secondary HO2S output voltage remains in Zone 1 (0.29 V or below) for at least 72 seconds.

Driving Pattern

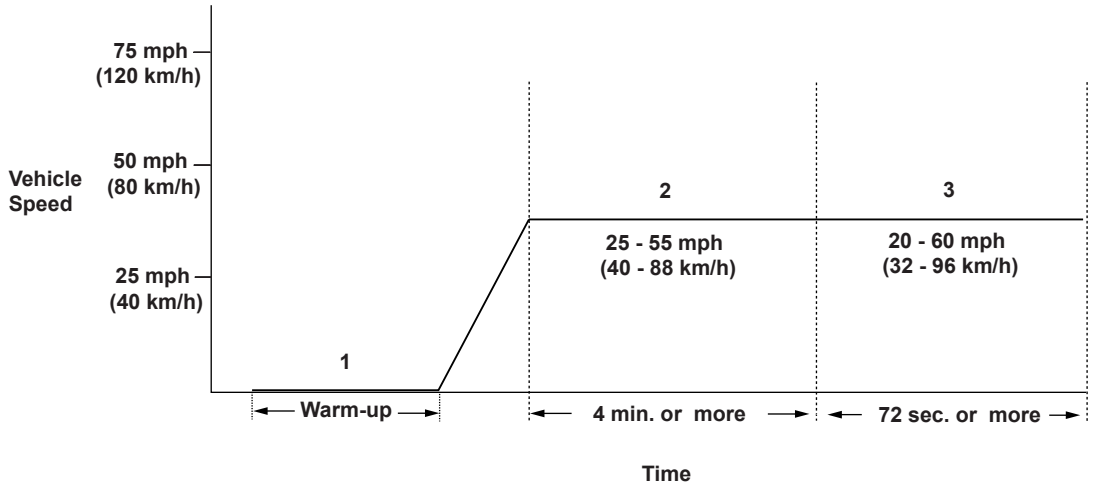

P0137-9853

1. Start the engine. Hold the engine at 3,000 rpm with no load (in park or neutral) until the radiator fan comes on.
2. Drive the vehicle at a speed between 25 - 55 mph (40 - 88 km/h) for at least 4 minutes.
3. Then, drive immediately at a steady speed between 20 - 60 mph (32 - 96 km/h) for at least 72 seconds.

- If the EVAP monitor runs instead of the HO2S monitor, turn the engine off, then restart it, and the HO2S monitor will restart.
- If you have difficulty duplicating the DTC, retest after turning off electrical components such as the audio system and A/C, and try a different gear position.
- Drive the vehicle in this manner only if the traffic regulations and ambient conditions allow.

Diagnosis Details

Conditions for illuminating the MIL

When a malfunction is detected during the first drive cycle, a Temporary DTC is stored in the PCM memory. If the malfunction recurs during the next (second) drive cycle, the MIL comes on and the DTC and the freeze frame data are stored.

Conditions for clearing the MIL

The MIL will be cleared if the malfunction does not recur during three consecutive trips in which the diagnostic runs.
The MIL, the DTC, the Temporary DTC, and the freeze frame data can be cleared by using the scan tool Clear command or by disconnecting the battery.